



## No-Sway 3 Rail Shade

This is a manually operated shade with no lift cords or cordlocks. It is raised or lowered by pushing or pulling on the floating centre rail. It will stay in place and taut in any position.

